


nÂ°	Artikel	Aantal gebruikt
1	330094 SPECIAL SCREW (LEFT HAND) M6	1
3	330746 GEAR BOX ASS'Y	1
4	328728 CLUTCH DIAL	1
5	328716 NUT	1
6	328715 PLATE (A)	1
7	328713 FRONT CASE	1
8	320773 CLICK SPRING	1
9	327143 SPRING (A)	4
10	306936 STEEL BALL D5	4
11	328717 WASHER (B)	1
12	328718 LOCK RING	1
13	319744 ROLLER	4
14	328721 RING GEAR	1
15	328720 CARRIER	1
16	328722 PLANET GEAR (C) SET (4 PCS)	4
17	320762 PLATE (B)	1
18	320763 REAR CASE	1
19	320087 SCREW SET M3X12 (4 PCS.)	4
20	330747 SHIFT KNOB (A) (OLD 328731)	1
21A	331070 SLIDE RING GEAR (OLD 330059)	1
22	329456 SLIP BLOCK	2
23	327133 STOPPER SPRING	4
24	328730 STOPPER	2
25	328724 PINION (C)	1
26	320781 PLANET GEAR (B) SET (4 PCS)	4
27	328725 PINION (B)	1
28	328727 PLANET GEAR (A) SET (4 PCS)	4
29	328726 FIRST RING GEAR	1
30	320768 PLATE (A)	1
31	320769 MOTOR SPACER	1
32	360860 ARMATURE & PINION SET	1
33A	334902 MAGNET (H) (OLD 322520)	1
34	322521 DUST GUARD	1
35A	334889 BRUSH BLOCK SET	1
36	999054 CARBON BRUSH 5X6X11.5 (1 PAIR)	2
37	319918 BRUSH CAP	2
38	313687 TAPPING SCREW (W/FLANGE) D3X16 (BLACK)	8
40	330090 HOUSING SET (A+B) (GREEN)	1

nÂ°	Artikel	Aantal gebruikt
41	329173 DC-SPEED CONTROL SWITCH DS14/18DSL DV14/18DSL	1
42	329454 PUSHING BUTTON (A)	1
44	327001 TRUSS HD. SCREW M4 (BLACK)	1
45	326790 HOOK (A)	1
46	306952 STRAP (BLACK)	1
47	327002 LOCK NUT M4 (BLACK)	2
48	327004 PACKING	2
49	330095 CONTROLLER TERMINAL SET	1
504	329897 BATTERY COVER	1
601	955657 - DRIVER BIT (A) 3MMX70L	1

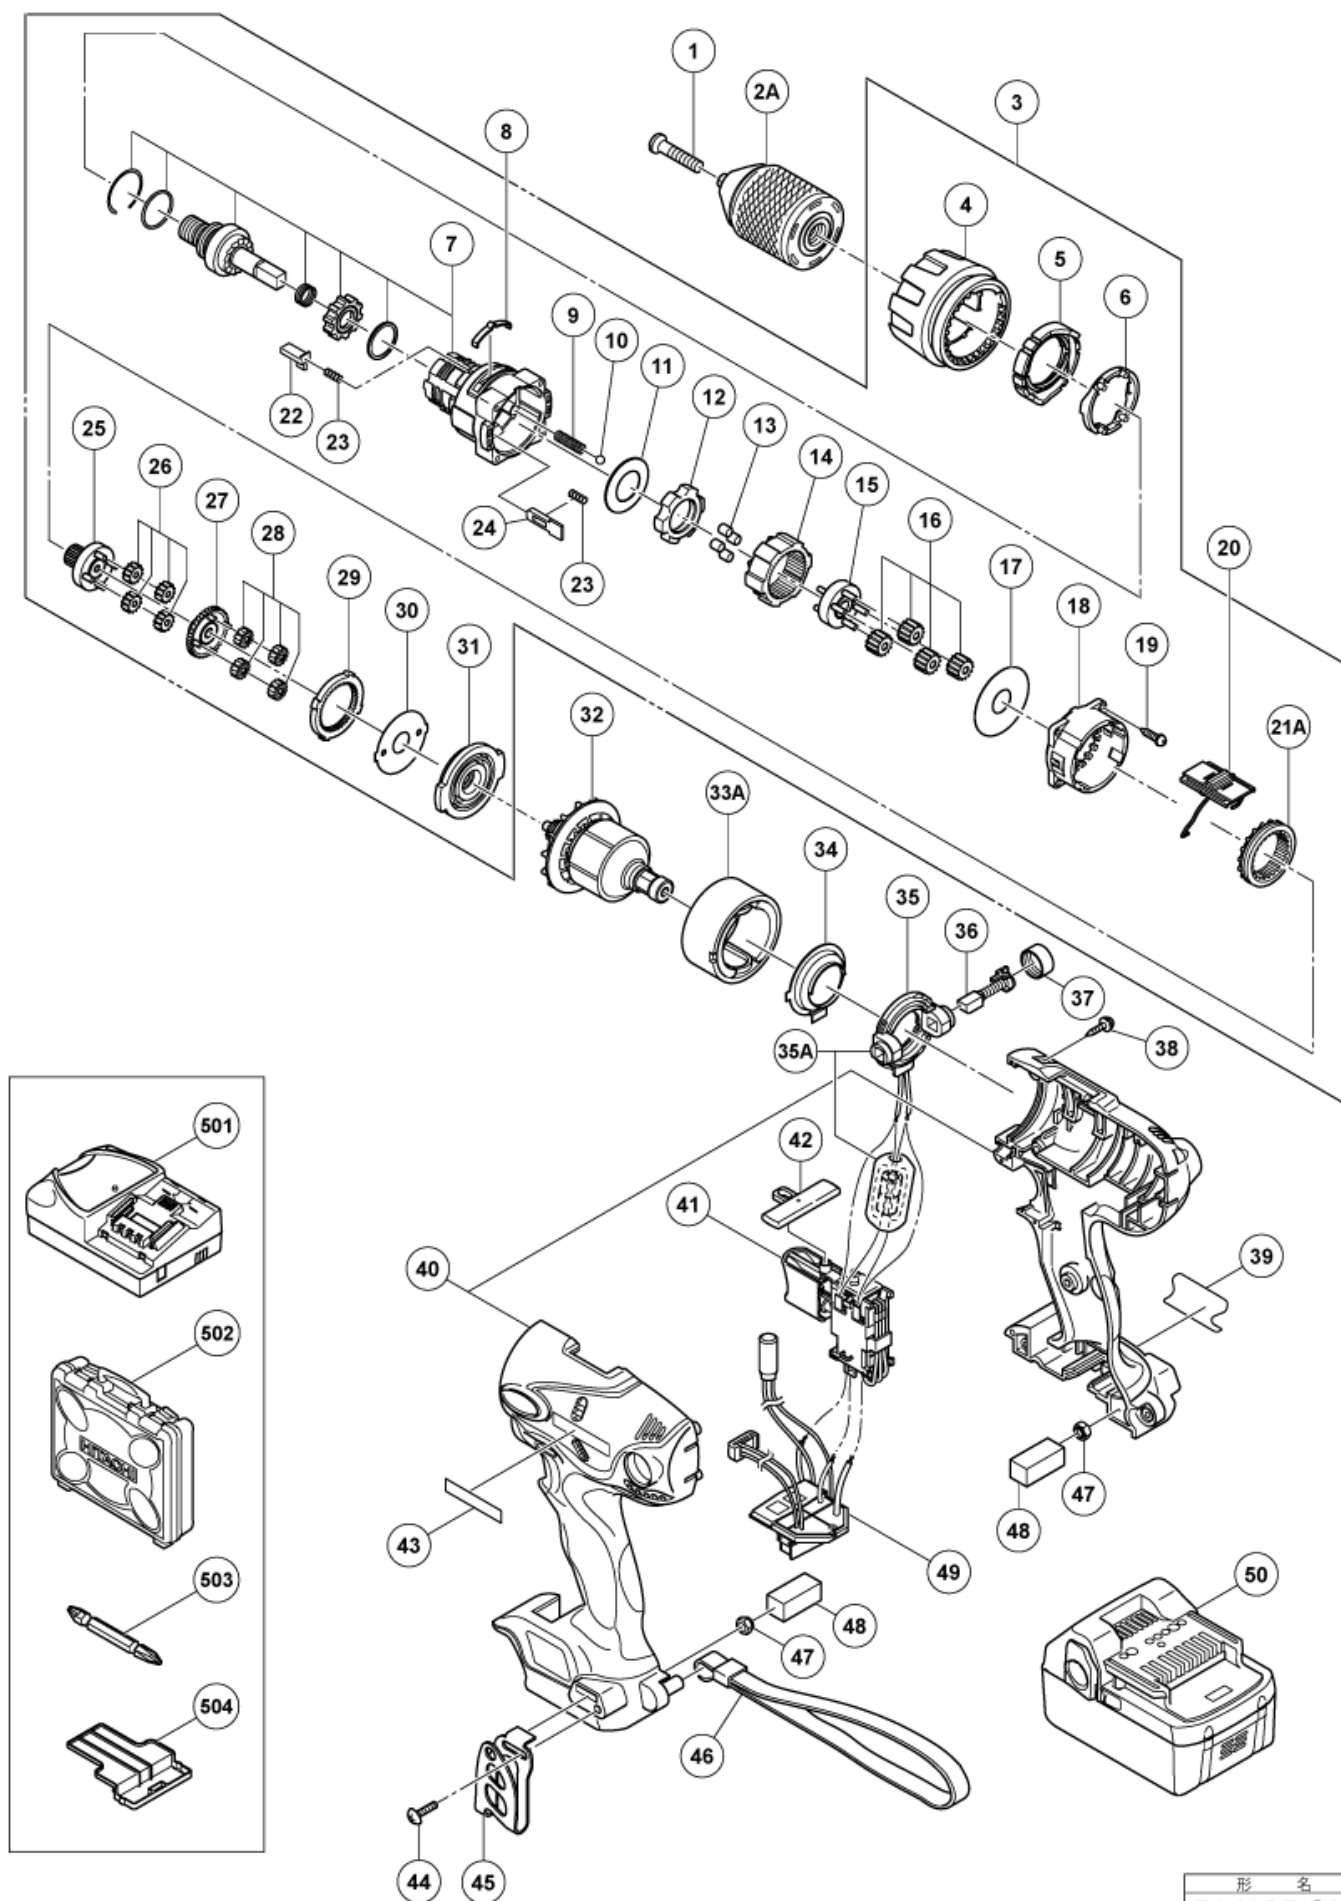

Rev.4

形 名
DV18DSL